User Guide

Quick start for Wi-Fi Camera

V 1.1

Install the App

Please use your web browser scan the following **QR** code, download and install it onto your smartphone/tablet.





LianYa







Android

Login

If you DO NOT have a registered account

- **Step 1** Open the App. Tap **Regist Account**.
- **Step 2** Choose the region where you are. Then enter your email address.
- Step 3 Tap **GET VERIFICATION**. (Tips: If you do not receive activation code. 1. Please check your spam box. 2. Check if you enter the correct email address. 3.Enter another email address.)

Step 4 Enter the **Verification Code**. Set the login password, and tap **REGISTER**.





If you already have a registered account

- **Step 1** Open the App.
- **Step 2** Enter the registered Email address and password, and tap **Login**.





Add the camera to App

Method 1: Add camera through hotspot

Step 1 Login app and power on the camera.

Step 2 Search the camera hotspot.

- 1. To go to Settings > Wi-Fi(WLAN) of your smartphone.
- 3. Enter the default Password 9876543210
- 4. Join(CONNECT).



No SIM	15:25	25% 🛃		No SIM 🗢	
Enter the	password for "IPC_01Z3MH	IDPRG"		Settings	
Cancel	Enter Password	Join		Wi-Fi	
		\smile		IPC_01Z3 No Internet C	MHDPR(
Password	9876543210			NETWORKS	
You can also a your iPhone n	access this Wi-Fi network b ear any iPhone, iPad, or Ma	by bringing ac which		1A263	
contacts.	d to this network and has y	ou in their		5A12	
				5A13-16,2	2.4G
			17	5A13-16,5	5G
				5A155A	
				5A155A_5	5G
				5B11-31	
				6A36	
				6B11	

Tips: Your phone maybe prompt like "This WLAN network has no Internet access. Connect anyway? ". Please choose **CONNECT**.

China Mob 🖬 🖬 i 🛠 🕫 🖲	
\leftarrow wlan	?
WLAN	
Network acceleration	Off >
More settings	
CONNECTED TO WLAN	
IPC_01Z3MHDPRG Connected	
AVAILABLE NETWORKS	
6A39 Saved, encrypted (available)	
1A263 Encrypted	a
5A155A Encrypted	
5A155A_5G	
This WLAN network has no access. Connect anyway?	o Internet
CANCEL	ONNECT
Encrypted	

Step 3 Add the camera to App.

- 1 Return the App home page, tap **Add device** Or **+** in the upper right corner of the home page.
- 2 The app will find the camera then tap Add.
- 3 Wait a moment, the camera is added successfully.



Step 4 You can use app view camera, download video Within 15 meters.

Method 2: Add camera to Wi-Fi router

Step 1 Login app and power on the camera.

- **Step 2** Tap **Add device** Or + in the upper right corner of the home page.
- Step 3 Tap AP access to the network and tap Next.
- **Step 4** Input in the Wi-Fi router name and password and tap Next.
- **Step 5** Connect to wifi camera hotspot.
 - 1. Tap Next to go to **Settings** > **Wi-Fi(WLAN)** of your smartphone.

 - 3. Enter the default Password 9876543210
 - 4. Join(CONNECT).
 - Tips: Your phone maybe prompt like "This WLAN network has no Internet access. Connect anyway? ". Please choose CONNECT.
- **Step 6** Confirm your phone connected with the camera's hotspot. Return to app and tap Next.
- **Step 7** Wait a moment, the camera will bind to Wi-Fi router.
- **Step 8** When camera is added successfully, tap Confirm, and you can name your camera, which is **Home** in this example. Then tap Confirm.
- Step 9 You can use app view camera, download video through the internet.

TIPS:

- **1.** One camera can bind to more than one Wi-Fi router.
- 2. If bound to one Wi-Fi router, the camera will memorize the Wi-Fi router. When come inside the area of the bound

router, it will automatically connect.

3. If remove the camera away from the bound Wi-Fi router area(100 meters or more). The camera's hotspot will appear again.



China Mob 💷 👯 🕅 🎅 💋 💰	🛯 🕱 🗊 I 18:37
\leftarrow WLAN	?
WLAN	
Network acceleration	Off >
More settings	>
Encrypted	7 0
ChinaNet-i4gc Encrypted	Â
ChinaNet-z5AC Encrypted	Î
DAYOU Encrypted	
DIRECT-ubM2020 Series Encrypted	
IPC_01Z3MHDPRG Encrypted	
LLVIP Encrypted	
RoamWiFi-240816 Encrypted	
RY Encrypted	

China Mob 🔟 🗐 🕫 🖉 🧔 💦 🕅 🕅 🌘 🕼 17:03	China Mob 💵 👯 🕅 🤶
\leftarrow IPC_01Z3MHDPRG	\leftarrow wlan
Password 9876543210 🕸	WLAN
Show advanced options	Network accel
	More settings
	CONNECTED TO
	IPC_01Z3MHD Connected
	AVAILABLE NET\
CANCEL CONNECT	6A39 Saved, encrypted
Secure keyboard 1 2 2 4 5 6 7 8 0 0	1A263 Encrypted
q w e r t y u i o p	5A155A_5G Encrypted
asdfghjkl	6A36 Encrypted
☆ z x c v b n m <	6B11 Encrypted
?123 ,	6B11_5G Encrypted

China Mob 🔟 👯 🖊 🥱 🕫 🔯	N 🕱 🗐 17:03
\leftarrow WLAN	?
WLAN	
Network acceleration	Off >
More settings	>
CONNECTED TO WLAN	
IPC_01Z3MHDPRG Connected	
AVAILABLE NETWORKS	
6A39 Saved, encrypted (available)	
1A263 Encrypted	
5A155A_5G Encrypted	Î
6A36 Encrypted	Î
6B11 Encrypted	Î
6B11_5G	

Home page

After logging in to App, the default page is **Home** page. You can preview all devices under this account, or add a device, etc.

Micro SD card recording storage

Use Micro SD card for the first time

Camera supports recording storage in Micro SD card. After the camera successfully identifies the Micro SD card, it will automatically start recording according to the recording mode.

Step 1 Log in to App to check whether the Micro SD card can be identified normally.

- **1.** Log in to App. Tap the camera **Settings** which you want to set on the homepage.
- 2. Tap Record Settings.
- 3. View the SD status.

hina Mob 🎟 🗄	1 2 7 2	😢 🕵 🞯 i 15:14		China Mob 💷 🖏 🖬	≅ %₽	🛯 🕱 🞯 i 15:14
4y smar	device(1/1)	88 +		<		
• HOME	2023-04	 4:14:14:05 ▲ share 		Name		HOME >
	0	2		share		>
~ ~				•		
Isarmed	Playback	Settings		Modify Pass	word	>
				Record Sett	ings	>
			· · · · · · · · · · · · · · · · · · ·	Alarm Settir	ngs	>
				🛞 Track Settin	g	>
				Audio Settir	ng	>
						\ \
					3	
				Time Setting	gs	>
				Video Encod	de Setting	>
0	a ==			Network Str	ategy Setting	>
Camera	Alarm Album	More		Ethernet Se	tting	>

If necessary tap **Format** button to format.

China Mob 🖾 🖫 😫 🔞 🚳 15:14	China Mob 🔤 🖏 📶 🛜 🎔 🖴	🕲 🐼 🞯 I5:15	China Mob 🗉	a ;""	🛯 🕱 🞯 15:15
Record Settings	< Record S	ettings	<		
SD status: Storage card inserted	SD status:	Storage card inserted	SD status:	Store	age card inserted
98%		98%			98%
Enable Record	Enable Record		Enable Reco	ord	
Record Mode AUTO RECORD V	Record Mode	AUTO RECORD 🔻	Record Mod	e AUT	TO RECORD 👻
Record Stream HD STREAM 💌			Record Street	am I	HD STREAM 👻
Current Resolution 1920x1080	It will take 30 seco the SD card. forma	nds to format	. (Getting SD card parameters	
Record Duration(minute): 10 MIN 💌	F	CANCEL OK	Record Dura	ition(minute):	
Record Time Every Day	Record Time	Every Day >	Record Time	•	Every Day >
Record coverage:	Record coverage:		Record cove	rage:	
Format	Form	at			
CANCEL OK	CANCEL	ок	CANC		

Attention: All the information will be deleted after format.

View videos on the smartphone

Method 1

Log in to App, Tap the camera **Playback** which you want to view on the homepage > Drag time pointer.

Method 2

Log in to App, Tap the camera **Playback** which you want to view on the homepage > **Browse** > choose the videos you need > Play.

Download videos to the smartphone

Log in to App, Tap the camera **Playback** which you want on the homepage > **Browse** > choose the videos you need > **Download File**. Wait Download completed.

View the download videos

Log in to App, Tap Album > tap \bigtriangledown and choose the camera > tap Download.

Reboot the camera

Log in to App, Tap the camera **Settings** which you want reboot on the homepage > **Reboot the camera** > tap **OK**. Wait the camera reboot.

Restore factory settings

Log in to App, Tap the camera Settings which you want restore on the homepage > Restore Copy Factory Settings > tap OK. Wait the camera reset to default.

Attention: All the binding to the Wi-Fi routers will be deleted after restore.